

SOHO Motorsports Cruise Control Bracket Relocation Kit

Model: Nissan 370z



For technical questions and support, send an email to:
support@sohomotorsports.com

Congratulations on the purchase of your SOHO Motorsports cruise control bracket kit!

Please contact us if you have any questions regarding this kit or installation procedures.

This kit is designed for use with an aftermarket hub and steering wheel. The cruise control switches are NOT INCLUDED and will need to be removed from the factory steering wheel.

Parts Inventory:




- SOHO Motorsports Cruise Control Bracket
 - (4) M6 x 1.0 Bolts
 - (4) M6 x 1.0 Nuts
 - (2) Zip ties

Cruise Control Instructions:

1. With the steering wheel removed and the hub showing, put the switch that has the cruise control accel/ resume and the on/off button onto the bracket as shown below.



2. Install the provided nuts onto the bolts that are holding the switch to the bracket.

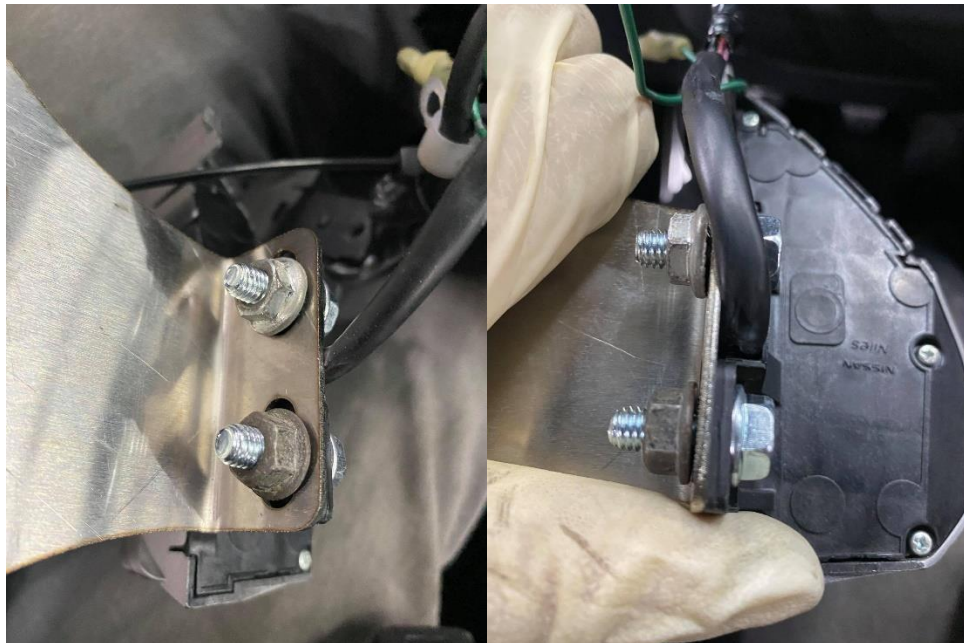

3. Repeat the process for the other switch. Once you have secured both switches, mount the bracket using one of the bolts from the quick release adapter.
4. On the driver's side switch, be sure to use the white tab to hold the wires into place prior to installing the bolt as shown below.



5. Be sure to run the wire through the bracket for the horn prior to installing the quick release adaptor.



6. With the bracket and switches now mounted, use the supplied zip ties to secure the wiring and ensure that they are not hanging down.
7. Reinstall the hub. The final product should look like the picture below.



8. Install the steering wheel and ensure that nothing is touching or rubbing.

